

Manual

EN



# RM85-H DEHUMIDIFIER



Hire Manual

## SAFETY INFORMATION



Read the instruction manual carefully and ensure you understand the content before using the product.

### Safety information

- Children shall not play with the appliance.
- This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the application in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.
- If the appliance is switched off at the mains power supply for any reason, the unit must be allowed to stand at rest for at least three minutes before restarting.
- Due to the high pressures within the refrigeration circuit, under no circumstances must direct heat be applied to the evaporator coil in an attempt to remove the build-up of ice.
- No attempt should be made to cut open any part of the refrigeration circuit due to high pressures and gas involved.
- If the appliance is switched off at the mains power supply for any reason, it must be allowed to stand at rest for at least three minutes before restarting. Failure to do so may cause the appliance to blow the fuses owing to the compressor due to there being a refrigerant imbalance.
- The Global Warming Potential (GWP) of refrigerants used in products manufactured on behalf of El-Bjorn UK Ltd is as follows: -  
R290 – 3  
R454c – 148
- For type and weight of refrigerant contained in this appliance, please refer to the product data label.
- Do not insert objects into any of the grilles on the machine.
- Do not cover or obstruct airflow from the grilles.
- Do not operate the unit with the covers removed
- Do not stand on the unit.
- Do not attempt to lift heavy units unassisted.
- Do check the plug on the unit matches the supply.
- Do check the supply cord and power supply are earthed correctly.
- Do check the voltage selection before attempting to power up the unit (This is for dual voltage units only).
- Do use a residual current device “RCD” where possible maintenance on the device without supervision.



The appliance uses R454c refrigerant gas. This gas is much kinder to the environment as it is non-toxic with zero Ozone Depletion Potential (ODP). This is a flammable gas and the following warnings should be considered:

- The appliance uses a flammable refrigerant (see unit serial plate for charge quantity). It is therefore part of a sealed system. **Any servicing should only be carried out by El-Bjorn UK Ltd service personnel or its service agent.**
- Do not pierce / puncture the appliance at any point, even when disposing of. Before disposing all refrigerant should be evacuated and disposed of as required by local environmental laws.
- If there is any damage to the appliance, DO NOT USE and contact your supplier.
- The appliance must not be used in a potentially explosive atmosphere.
- The appliance must not be used in an aggressive atmosphere e.g., chemical environments.
- The appliance must not be used in a high dust environment.
- The appliance must not be used in a high solvent concentration atmosphere.

- The appliance should not be used or stored in a space of 4M3 or smaller.
  - Do not use the appliance in a room with any continuous source of ignition e.g. open flames or gas fires.
  - R454c is an odourless gas.
  - Anyone who does work on the refrigeration circuit must have the appropriate qualifications / certification issued by a national accredited organisation to ensure competence when handling flammable refrigerants.
  - Any parts to be replaced within the appliance should only be done so by El-Bjorn UK Ltd or its service agent.
- 

## DEHUMIDIFIER PRINCIPLE

Dehumidifiers remove moisture from the air that is circulating through the appliance.

The resulting reduction of relative humidity helps prevent rust, rot, mould, mildew and condensation within the room, or other enclosed spaces where the dehumidifier is used.

A dehumidifier consists of a motor-compressor unit, a refrigerant condenser, an air circulating fan, a refrigerated surface, a means of collecting and disposing the condensed moisture and a cabinet to house these components.

The fan draws air through the refrigerated surface and cools it below its dew point, removing moisture which is collected and led away. The cool air then passes the hot condenser, where it is reheated. With the addition of other radiated heat, the air is discharged into the room at a higher temperature but lower relative humidity than when the air entered the appliance. Continuous circulation of the room air through the appliance gradually reduces the relative humidity in the room.

The appliance is a rugged, reliable drying unit designed to operate effectively over a broad range of temperature and humidity conditions.

An active hot gas defrost system guarantees positive de-icing, thereby optimizing operation at low temperatures. Should the ambient temperature fall below 15°C then ice will form on the evaporator coil as the air is passed over it, and in turn the efficiency of the unit will drop. To prevent the buildup of this ice on the evaporator coil an electronic timer is incorporated to energize the hot gas defrost valve. Operating the hot-gas valve causes the evaporator coil to defrost and the water to drain down to the condensate pan and into the drainage tube.

The appliance has been designed to work in ambient temperatures between 3°C and +35°C. Should the temperature in the room become excessive a thermostat within the compressor casing will open and dehumidifying will stop, until the thermostat resets itself.

## UNPACKING

Carefully remove the appliance from its transit packaging and visually check for signs of transit damage. If there is evidence of damage DO NOT attempt to operate the appliance, call your supplier for advice. Do not discard the packing; it will be useful when transporting the dehumidifier unit in the future.

---

## INSTALLATION

### POSITIONING:

Position the appliance in the center of the room to be conditioned if at all possible. However, if a damp patch is particularly apparent the outlet grille should be pointed towards it.

*NOTE:* Both inlet grille and outlet grille of the appliance must have clear space around them and not be obstructed in anyway. The unit must also be on a level surface.

Appliance shall be installed, operated and stored in a room with a floor area larger than 4M<sup>2</sup>.

### WIRING:

The unit will come fully wired to the relevant plug

*NOTE:* When a generator is used to supply the power, it is essential to check the minimum kva required in the technical section within this manual. The generator must be started before connection is made to the dehumidifier.

### DRAINAGE:

The appliance is fitted with a condensate pump which collects all the condensate. As the condensate pump fills with water, it will automatically activate and empty via the tube outlet located at the back of the dehumidifier, this should be connected to a water container or permanent drain. If the pump fails, then the dehumidifier will automatically switch off.

*NOTE:* After the pump has emptied there will still be a small amount of water standing in the pump reservoir which will leak if the dehumidifier is not kept upright

## OPERATION

- Once the appliance is installed turn the power supply on, then turn the on / off switch to the 'I' position, note the display will flash for approximately 1 second then show the humidity set point for approximately 12 seconds. Also all the indicator lights will illuminate for the same duration. After this brief period the display will show the room humidity and all the lights will go off. The machine is now powered up (POWER light illuminated) and ready to operate. Then carry out the following: -
  - Set the humidity set point to lowest setting (35% RH) as follows.
    - o Press the UP and DOWN arrow keys together for 3 seconds and the display will start to flash
    - o Use the UP and DOWN arrow keys to adjust the set point to 35%
    - o Press the RIGHT arrow key to save (if the RIGHT arrow key is not pressed for 3 seconds the selection is cancelled)
    - o Once set to 35% and saved the compressor will start and the drying light will illuminate
  - Check that the compressor is running
  - Leave the appliance to run for approximately 15 minutes
  - Observe the coils through the filter grille to confirm frost formation or weeping of the evaporator coil
    - o If the air temperature is below 25°C, an even coating of frost should cover the entire evaporator coil.
    - o If the air temperature is above 25°C, frost and/or droplets of condensed water should cover the entire evaporator coil.

When the unit is operated in an ambient of less than 15°C, a defrost cycle should occur. This will be at intervals of no more than every hour and will last no more than 5 minutes. The exact time is impossible to predict as the unit is fitted with a temperature sensitive defrost control. When in defrost the DRYING lamp will extinguish and the DEFROST light illuminate. After defrost the lights will switch back.

After using the appliance, turn it off for 5 minutes to allow the condensate on the coils to drain into the pump reservoir. Then turn the appliance back on and press the momentary purge switch for 20 to 30 seconds to evacuate the water from the pump reservoir.

## LIGHT FUNCTIONS:

The unit has four LED indicators, located on the top of the unit. The following lists the functions of these lights:

### 1 - ON / OFF

Green solid – Indicates power ON

### 2 – DRYING

Blue flashing – Indicates drying selected (compressor has not started)

Blue solid – Indicates drying ON (compressor has started)


### 3 – DEFROST

Yellow flashing (Approximately every 5 seconds) – Defrost cycle active

Yellow solid – Defrost in progress

### 4 – ALARM

Yellow Flashing followed by Red solid – Pump Fault

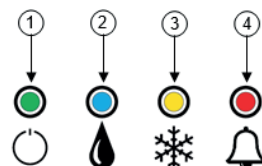

**If, after carrying out the above procedures, the appliance does not appear to function properly, refer to the Trouble Shooting section, which follows, or contact your supplier.**

## ROUTINE MAINTENANCE

### WARNING:

ENSURE THE POWER CORD TO THE APPLIANCE IS DISCONNECTED BEFORE CARRYING OUT ROUTINE MAINTENANCE.

**ANY SERVICING OR REPAIR SHOULD ONLY BE CARRIED OUT BY EL BJORN UK LTD OR ITS SERVICE AGENT.**

To ensure continued full efficiency of the appliance, maintenance procedures should be performed as follows:

1. Clean the surface of the evaporator and condenser coils by blowing the dirt out from behind the fins with compressed air. Hold the nozzle of the air hose away from the coil (approx 6") to avoid damaging the fins. Alternatively, vacuum clean the coils.


### WARNING:

**DO NOT STEAM CLEAN THE REFRIGERATION COILS**

2. To check the refrigerant charge, run the appliance for 15 minutes. The evaporator coil should be evenly frost coated across its surface. At temperatures above 25°C, the coil may be covered with droplets of water rather than frost. Partial frosting accompanied by frosting of the thin capillary tubes, indicates loss of refrigerant gas or low charge.

## TROUBLESHOOTING

<b><u>SYMPTOM</u></b>	<b><u>CAUSE</u></b>	<b><u>REMEDY</u></b>
<b>Little or no airflow</b>	<ol style="list-style-type: none"> <li>1. Loose fan on shaft</li> <li>2. Fan motor burnt out</li> <li>3. Dirty refrigeration coils</li> <li>4. Loose electrical wiring</li> <li>5. Control humidistat either set too high or malfunctioning</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten fan</li> <li>2. Replace the fan motor</li> <li>3. See <i>Routine Maintenance</i></li> <li>4. Check the wiring diagram to find fault and repair</li> <li>5. Adjust humidistat as required or replace</li> </ol>
<b>Little or no water extraction</b>	<ol style="list-style-type: none"> <li>1. Insufficient air flow</li> <li>2. Compressor fault</li> <li>3. Loss of refrigerant gas</li> </ol>	<ol style="list-style-type: none"> <li>1. Check <u>all</u> of the above</li> <li>2. Contact your supplier</li> <li>3. Contact your supplier</li> </ol>
<b>Little or no defrost when required</b>	<ol style="list-style-type: none"> <li>1. Faulty Timer</li> <li>2. Faulty bypass timer</li> </ol>	<ol style="list-style-type: none"> <li>1. Contact your supplier</li> <li>2. Contact your supplier</li> </ol>

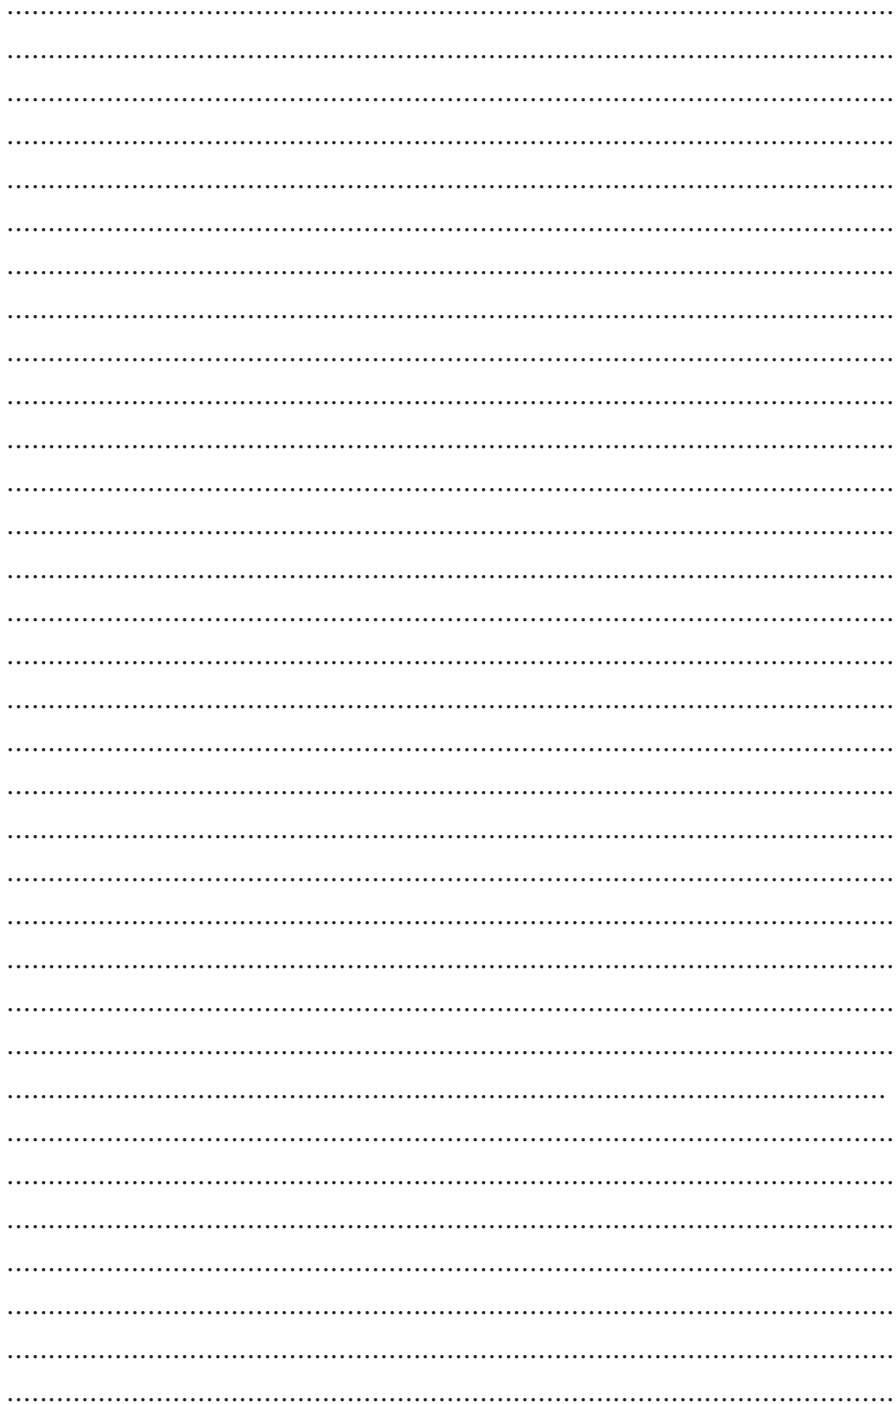

**El-Björn UK LTD**

Unit 2 Oyster Park, 109 Chertsey Road, West Byfleet, GB-Surrey, KT14 7AX  
Phone: (+44) 01483 729 348, E-mail: info@elbjorn.com

